


**Frame Preparation (LHRB Application Shown)**


Drawing shows only one method of installation. Method of installation may vary per door & frame manufacturer.

Back box provided by hollow metal manufacturer to keep dust & dirt out of strike pocket. Construct the box in a manner that it will hold its shape. Minimum material thickness 16 gauge.

Conduit holes to be added as required to hold wire connections.

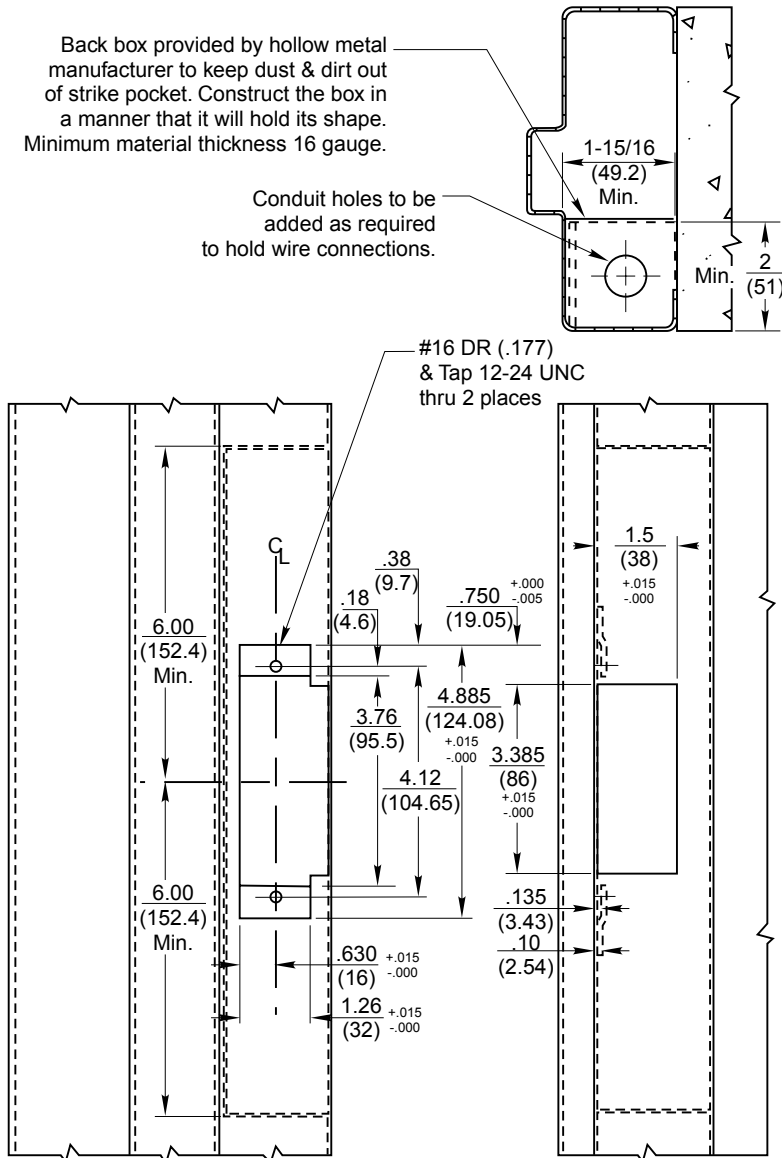


**Lock / Strike Mounting**

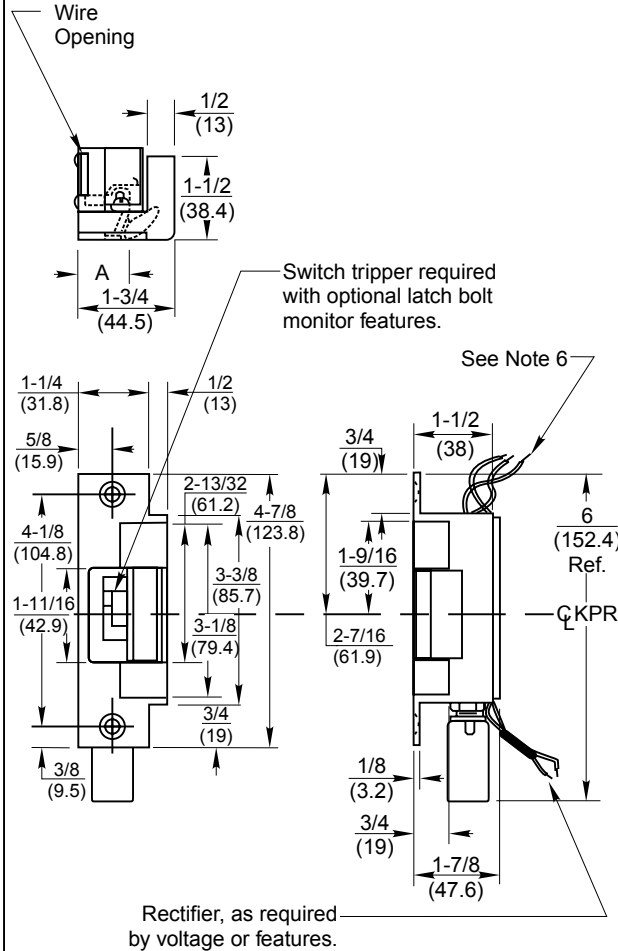

**Model 712-75 Electric Strike**

**NOTES:**

1. DO NOT SCALE - All dimensions in inches (mm).
2. Dimensions subject to change without notice.
3. Number of wires will vary per features of strike.
4. Cut off all excess wire not req'd for installation.
5. Wires to be run from side & rear of strike to conduit connection.
6. All wiring connections to be made opposite the solenoid end of strike. If a rectifier (optional) is used, it may be installed at either end of strike.
7. Refer to catalog for standard & optional features.
8. Door & frame manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware.
9. Tolerances shown are for cutouts.
10. Dimension "A" (Keeper Position) is adjustable from .80 to 1.00. To adjust, loosen the two 8-32 RHMS which are used to mount strike, reposition strike, and retighten screws.

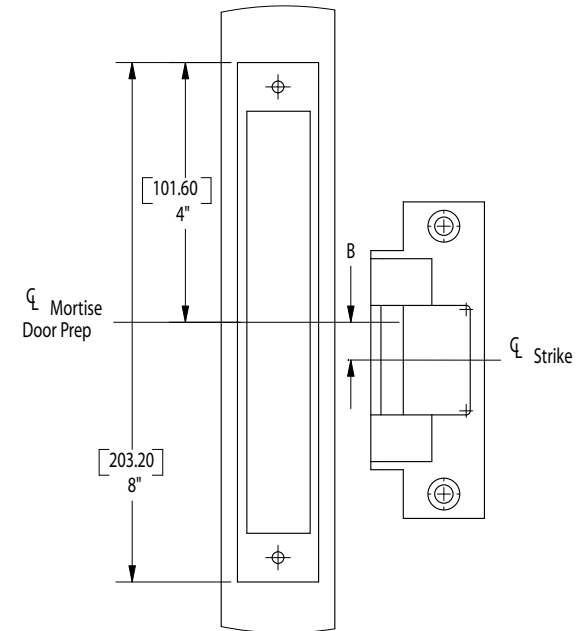

MORTISE LOCK	B
CORBIN/RUSSWIN, SARGENT (8200), YALE (8800), ARROW, FALCON	0"
BEST 34H-37H*	1/4"
SCHLAGE	3/4"
YALE (8700)	7/8"

\*Not compatible with BEST 45H & 47H

**712-75 Electric Strike**

**FOLGER ADAM®**  
ELECTRIC DOOR CONTROLS

REF. REPAIR PART DWG. 2500700

www.folgeradamedc.com

TEMPLATE NUMBER

**4836081.001 Rev B**

DATE

**3-07**